All manuals and user guides at all-guides.com

aiwa

aiwa SERVICE

NSX-S222
NSX-S229
NSX-S333

COMPACT DISC /
STEREO CASSETTE RECEIVER

• TYPE: HA<S222>,LH<S229>
HR,EZ<S333>

SERVICE MANUAL

SIMPLE MANUAL

• Replace this Service Manual with "Revision Publishing" when it is issued.

S/M Code No. 09–993–404–4T3

all-guides.com

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 1/8

NOTE: The characters in the suffix column indicate the part usage.

3HR	XX		H
33EZ	XX		I
HA	XX		J
29LH	XX		K

REF.NO	PARTS NO.	KANRI NO.	DESCRIPTION	SUFFIX
C 101	87-A11-140-080		CAP,TC U 0.047-50 K B	ABCD..GH.JK.....
C 153	87-010-221-080		CAP, ELECT 470-10V	ABCD..GH.JK.....
C 151	87-A11-142-080		CAP,TC U 0.068-50 K B	ABCD..GH.JK.....
C 204	87-010-246-040		CAP,E 47-35 SME	ABCD..GH.JK.....
C 202	87-010-421-040		CAP,E 4.7-50 5L	ABCD..GH.JK.....
C 201	87-010-421-040		CAP,E 4.7-50 5L	ABCD..GH.JK.....
C 203	87-010-560-040		CAP,E 10-50 GAS	ABCD..GH.JK.....
C 205	87-018-205-080		CAP, CERA-SOL 0.022	ABCD..GH.JK.....
C 210	87-010-060-040		CAP,E 100-16	ABCD..GH.JK.....
C 213	87-015-695-040		E/CAP 1UF 50V TAPG	ABCD..GH.JK.....
C 218	87-018-125-080		CAP, CER 330P-50V	ABCD..GH.JK.....
C 217	87-018-125-080		CAP, CER 330P-50V	ABCD..GH.JK.....
C 216	87-018-131-080		CAP, CER 1000P-50V	ABCD..GH.JK.....
C 219	87-018-131-080		CAP, CER 1000P-50V	ABCD..GH.JK.....
C 212	87-018-205-080		CAP, CERA-SOL 0.022	ABCD..GH.JK.....
C 211	87-A10-189-040		CAP,E 220-10	ABC.....
C 214	87-A11-155-080		CAP,TC U 0.01-16 Z F	ABCD..GH.JK.....
C 211	87-A11-242-040		CAP,E 220-10 M 5L SRM	...D..GH.JK.....
C 221	87-018-104-080		CAP,TC-U 10P-50 SL	ABC.....
C 221	87-018-105-080		CAP,TC-U 12P-50 SL	...D..GH.JK.....
C 222	87-018-128-080		CAP, CERA-SOL SS 560P	ABCD..GH.JK.....
C 220	87-018-205-080		CAP, CERA-SOL 0.022	ABCD..GH.JK.....
C 224	87-018-205-080		CAP, CERA-SOL 0.022	ABCD..GH.JK.....
C 231	87-015-681-040		E/CAP 10-16	ABCD..GH.JK.....
C 230	87-A11-140-080		CAP,TC U 0.047-50 K B	ABCD..GH.JK.....
C 232	87-A11-140-080		CAP,TC U 0.047-50 K B	ABCD..GH.JK.....
C 234	87-A11-140-080		CAP,TC U 0.047-50 K B	ABCD..GH.JK.....
C 244	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 243	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 241	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 242	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 245	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 246	87-018-118-080		CAP,TC-U 82P-50 B	ABCD..GH.JK.....
C 251	87-018-117-080		CAP,TC-U 68P-50 SL	ABCD..GH.JK.....
C 252	87-018-131-080		CAP, CER 1000P-50V	ABCD..GH.JK.....
C 701	87-018-115-080		CAP, CER 47P-50V	ABCD..GH.JK.....
CN 701	87-099-013-010		CONN,11P 6216 V	ABCD..GH.JK.....
CON 102	87-099-015-010		CONN,13P 6216V	ABCD..GH.JK.....
CON 101	87-099-720-010		CONN,30P TYK-B(P)	.....
CON 101	88-NF9-658-010		CONN,30P BLK TYK-B(P)	ABCDEFGHIJK.....
D 201	87-A40-509-080		ZENER,MTZJ6.8C	ABCD..GH.JK.....
D 236	87-020-465-080		DIODE,1SS133 (110MA)	ABCD..GH.JK.....
D 232	87-A40-291-080		DIODE,1N4148 (CPT)	.....
FL 301	8Z-NF9-610-010		FL,SVA-10MS12	ABCD..GH.JK.....
IC 202	87-A20-914-010		IC,SPS-442-1-F	ABC.....
IC 202	87-A21-218-010		IC,NJL64H380A	...D..GH.JK.....
IC 201	8Z-NF9-630-010		C-IC,M38B59MFH-P101FP	ABCD...H.JK.....
IC 201	8Z-NF9-637-010		C-IC,M38B59MFH-E107FP	.....G.....
L 201	87-A50-434-010		COIL,CLK 4.19M(TOKO)	ABCD..GH.JK.....
LED 603	87-A40-619-080		LED,SLR-56PT-TE7-W GRN	ABCD..GH.JK.....
Q 101	87-026-218-080		TR,DTC144ES (0.2W)	ABCD..GH.JK.....
Q 102	87-026-218-080		TR,DTC144ES (0.2W)	ABCD..GH.JK.....
Q 152	87-026-609-080		TR,KTA1266GR	ABCD..GH.JK.....
Q 153	87-026-610-080		TR,KTC3198GR	ABCD..GH.JK.....
Q 151	87-026-610-080		TR,KTC3198GR	ABCD..GH.JK.....
Q 206	87-026-215-080		TR,DTC114YS	ABCD..GH.JK.....
Q 205	87-026-610-080		TR,KTC3198GR	ABCD..GH.JK.....
Q 203	87-026-610-080		TR,KTC3198GR	ABCD..GH.JK.....
Q 201	87-A30-090-080		FET,2SK2541	ABCD..GH.JK.....
Q 202	87-A30-090-080		FET,2SK2541	ABCD..GH.JK.....
Q 204	87-A30-090-080		FET,2SK2541	ABCD..GH.JK.....
Q 604	87-026-287-080		TR,DTC143ES	ABCD..GH.JK.....
Q 701	87-026-245-080		TR,DTC114ES	ABCD..GH.JK.....
Q 702	87-A30-240-080		TR,CSA1585BC	ABCD..GH.JK.....
Q 703	87-A30-241-080		TR,KTA1272Y	ABC.....
Q 704	87-A30-241-080		TR,KTA1272Y	ABC.....
Q 704	87-A30-318-080		TR,CSA952K	...D..GH.JK.....
Q 703	87-A30-318-080		TR,CSA952K	...D..GH.JK.....
S 201	87-A90-535-010		SW,RTRY EC16B24304	ABCD..GH.JK.....
S 202	87-A90-791-010		SW,RTRY EC16B12204 ENCODER	ABCD..GH.JK.....
S 308	87-A90-095-080		SW,TACT EVQ11G04M	ABC.....
S 308	87-A90-164-080		SW,TACT SKQAB(N)	...D..GH.JK.....
Z	8Z-NF9-601-010		PWB,FRONT 2M	ABC.....
Z	8Z-NF9-601-110		PWB,FRONT 2M	...D..GH.JK.....
C 402	87-010-112-040		CAP,E 100-16	...D...H.....
C 409	87-010-265-040		CAP,E 33-16 SME	...D...H.....
C 405	87-010-400-040		CAP,E 0.47-50	...D...H.....
C 405	87-010-544-040		CAP,E 0.1-50 SME	.....
C 407	87-015-699-040		CAP,E 10-50 7L	...D...H.....
C 404	87-018-117-080		CAP,TC-U 68P-50 SL	...D...H.....
C 408	87-018-118-080		CAP,TC-U 82P-50 B	...D...H.....
C 406	87-A11-144-080		CAP,TC U 0.1-50 K B	...D...H.....
C 403	87-A11-149-080		CAP,TC U 0.22-50 Z F	...D...H.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 2/8

C	401	87-A11-154-080	CAP,TC U 4700P-16 Z F	...D...H.....
C	412	87-018-131-080	CAP, CER 1000P-50V	.....H.....
C	413	87-018-131-080	CAP, CER 1000P-50V	.....H.....
C	410	87-A11-140-080	CAP,TC U 0.047-50 K B	...D...H.....
EMI	401	87-008-372-080	FILTER, EMI BL OIRNI	...D...H.....
J	401	87-A60-651-010	JACK,3.5MONO	...D...H.....
Q	404	87-026-609-080	TR,KTA1266GR	...D...H.....
Q	402	87-026-609-080	TR,KTA1266GR	...D...H.....
Q	403	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	406	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	401	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	405	87-A30-090-080	FET,2SK2541	...D...H.....
VR	401	86-NFA-607-010	VR,RTRY 10K15AX1 1 V XV0121PVN	...D...H.....
FC	2	87-033-213-080	CLAMP, FUSE	.B..EFG.I.....
FC	1	87-033-213-080	CLAMP, FUSE	.B..EFG.I.....
PR	102	87-026-681-080	PROTECTOR,5A 60V 491	A.....IJK.....
PR	101	87-026-681-080	PROTECTOR,5A 60V 491	A.....IJK.....
T	1	87-A60-317-010	TERMINAL, 1P MSC	.B..EFG.I.....
T	2	87-A60-317-010	TERMINAL, 1P MSC	.B..EFG.I.....
WH	101	87-A90-459-010	HLDR,WIRE 2.5-5P	AB.DEFGHIJK.....
Z		8Z-NF9-640-010	PWB,COMB MAIN (U/LH)	AB.....
Z		8Z-NF9-640-110	PWB,COMB MAIN (U/LH)	...DEFGHIJK.....
Z		8Z-NF9-641-010	PWB, MAIN (U/LH)	AB.....
Z		8Z-NF9-641-110	PWB, MAIN (U/LH)	...DEFGHIJK.....
Z		8Z-NF9-642-010	PWB, AC1 (U)	AB.....
Z		8Z-NF9-642-110	PWB, AC1 (U)	....EFG.I.....
Z		8Z-NF9-643-010	PWB, AC2 (U/LH)	AB.....
Z		8Z-NF9-643-110	PWB, AC2 (U/LH)	...DEFGHIJK.....
Z		8Z-NFA-650-010	PWB,COMB MAIN HK	.....
Z		8Z-NFA-651-010	PWB,MAIN HK	.....
Z		8Z-NFA-652-010	PWB,AC1 HK	.....
Z		8Z-NFA-653-010	PWB,AC2 HK	.....
PR	5	87-026-681-080	PROTECTOR,5A 60V 491	..C.....
PR	4	87-026-681-080	PROTECTOR,5A 60V 491	..C.....
R	1	87-A00-261-080	RES,M/F 0.56-1W J	..C.....
R	2	87-A00-261-080	RES,M/F 0.56-1W J	..C.....
WH	101	87-A90-460-010	HLDR,WIRE 2.5-7P	..C.....
Z		8Z-NF9-645-010	PWB,COMB MAIN (LH1)	..C.....
Z		8Z-NF9-646-010	PWB,MAIN (LH1)	..C.....
Z		8Z-NF9-648-010	PWB,AC2 (LH1)	..C.....
Z		8Z-NF9-745-010	PWB,COMB MAIN (LH1)-HK	.....
Z		8Z-NF9-746-010	PWB,MAIN (LH1)-HK	.....
Z		8Z-NF9-748-010	PWB,AC2 (LH1)-HK	.....
C	108	87-010-381-080	CAP, ELECT 330-16V	AB.DEFGHIJK.....
C	107	87-010-384-080	CAP, ELECT 100-25V	AB.DEFGHIJK.....
C	106	87-010-408-080	CAP, ELECT 47-50V	AB.DEFGHIJK.....
C	109	87-010-917-090	CAP,E 3300-50 M SMG	.....I.....
C	103	87-016-051-090	CAP,E 2200-35 SMG	AB.D...H.JK.....
C	101	87-016-495-090	CAP,E 3300-25 SMG	....EFG.....
C	105	87-018-127-080	CAP, CER 470P-50V	AB.DEFGHIJK.....
C	104	87-A10-011-090	CAP,E 2200-25 SMG	....EFG.....
C	101	87-A10-520-090	CAP,E 3300-35 M SMG	AB.D...H.JK.....
C	102	87-A10-627-090	CAP,E 2200-50 M SMG	.....I.....
C	111	87-010-247-080	CAP, ELECT 100-50V	...DEFGH.....
C	112	87-010-263-080	CAP, ELECT 100-10V	AB.DEFGHIJK.....
C	114	87-010-374-080	CAP, ELECT 47-10V	AB.DEFGHIJK.....
C	113	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
C	111	87-010-430-080	CAP, ELECT 100-63	AB.....IJK.....
C	115	87-A10-303-080	CAP,M 0.047-50 J	...DEFGHIJK.....
C	116	87-A10-303-080	CAP,M 0.047-50 J	...DEFGHIJK.....
C	116	87-A11-007-080	CAP,M 0.047-50 J DE	AB.....
C	115	87-A11-007-080	CAP,M 0.047-50 J DE	AB.....
C	130	87-018-131-080	CAP, CER 1000P-50V	.....
C	130	87-A11-155-080	CAP,TC U 0.01-16 Z F	.....I.....
C	152	87-010-385-080	CAP, ELECT 220-25V	....EFG.....
C	152	87-010-394-080	CAP ELECT220-35V	AB.D...H.JK.....
C	152	87-010-409-080	CAP,E 220-50 SME	.....I.....
D	108	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	109	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	108	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	109	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	107	87-A40-336-080	ZENER,MTZJ27D T-72	AB.DEFGHIJK.....
D	113	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	116	87-070-274-080	DIODE,1N4003 SEM	AB.DEFGHIJK.....
D	117	87-070-274-080	DIODE,1N4003 SEM	AB.DEFGHIJK.....
D	113	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	110	87-A40-345-080	ZENER,MTZJ10C	AB.DEFGHIJK.....
D	123	87-A40-455-080	DIODE,RL203 GW	AB.....IJK.....
D	121	87-A40-455-080	DIODE,RL203 GW	AB.....IJK.....
D	124	87-A40-455-080	DIODE,RL203 GW	AB.....IJK.....
D	122	87-A40-455-080	DIODE,RL203 GW	AB.....IJK.....
D	124	87-A40-535-080	DIODE,1N5393-GOODARK	...DEFGH.....
D	122	87-A40-535-080	DIODE,1N5393-GOODARK	...DEFGH.....
D	121	87-A40-535-080	DIODE,1N5393-GOODARK	...DEFGH.....
D	123	87-A40-535-080	DIODE,1N5393-GOODARK	...DEFGH.....
Q	108	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	105	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	106	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	103	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	109	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	107	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	104	87-A30-196-080	TR,2SC4115SRS	AB.DEFGHIJK.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 3/8

Q	115	87-026-219-080	TR,DTA144ES (0.3W)	AB.DEFGHIJK.....
Q	112	87-026-269-080	TR,DTA114ES	AB.DEFGHIJK.....
Q	110	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	111	89-213-702-010	TR,2SB1370 (1.8W)	AB.DEFGHIJK.....
R	124	87-A00-261-080	RES,M/F 0.56-1W J	.B.....
RY	101	87-A90-464-010	RELAY, DG12D2-O(M)	AB.DEFGHIJK.....
W	101	83-NE2-618-110	F-CABEL,5P-2.5	AB.DEFGHIJK.....
WH	102	87-A90-459-010	HLDR,WIRE 2.5-5P	AB.DEFGHIJK.....
C	108	87-010-381-080	CAP, ELECT 330-16V	..C.....
C	109	87-010-384-080	CAP, ELECT 100-25V	..C.....
C	102	87-010-385-080	CAP, ELECT 220-25V	..C.....
C	106	87-010-408-080	CAP, ELECT 47-50V	..C.....
C	103	87-010-917-090	CAP,E 3300-50 M SMG	..C.....
C	101	87-016-495-090	CAP,E 3300-25 SMG	..C.....
C	105	87-018-127-080	CAP, CER 470P-50V	..C.....
C	104	87-A10-627-090	CAP,E 2200-50 M SMG	..C.....
C	111	87-010-247-080	CAP, ELECT 100-50V	..C.....
C	112	87-010-263-080	CAP, ELECT 100-10V	..C.....
C	114	87-010-374-080	CAP, ELECT 47-10V	..C.....
C	110	87-010-384-080	CAP, ELECT 100-25V	..C.....
C	113	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
C	116	87-A10-303-080	CAP,M 0.047-50 J	.....
C	115	87-A10-303-080	CAP,M 0.047-50 J	.....
C	123	87-010-384-080	CAP, ELECT 100-25V	..C.....
C	122	87-010-384-080	CAP, ELECT 100-25V	..C.....
C	130	87-018-131-080	CAP, CER 1000P-50V	..C.....
D	108	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	109	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	104	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	106	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	102	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	103	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	101	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	105	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	108	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	109	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	107	87-A40-336-080	ZENER,MTZJ27D T-72	..C.....
D	112	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	111	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	116	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	117	87-070-274-080	DIODE,1N4003 SEM	..C.....
D	115	87-A40-116-060	DIODE,RS403L-B-D-51	..C.....
D	111	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	112	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	110	87-A40-345-080	ZENER,MTZJ10C	..C.....
Q	105	87-026-609-080	TR,KTA1266GR	..C.....
Q	102	87-026-610-080	TR,KTC3198GR	..C.....
Q	104	87-A30-196-080	TR,2SC4115SRS	..C.....
Q	108	87-A30-197-080	TR,KTA1267GR	..C.....
Q	103	87-A30-198-080	TR,KTC3199GR	..C.....
Q	109	87-A30-198-080	TR,KTC3199GR	..C.....
Q	106	87-A30-198-080	TR,KTC3199GR	..C.....
Q	107	87-A30-198-080	TR,KTC3199GR	..C.....
Q	115	87-026-219-080	TR,DTA144ES (0.3W)	..C.....
Q	110	87-A30-197-080	TR,KTA1267GR	..C.....
Q	111	89-213-702-010	TR,2SB1370 (1.8W)	..C.....
RY	1	87-A90-464-010	RELAY, DG12D2-O(M)	..C.....
W	101	85-NF5-628-010	F-CABLE 7P-2.5	..C.....
WH	102	87-A90-460-010	HLDR,WIRE 2.5-7P	..C.....
C	207	87-010-546-080	CAP, ELECT 0.33-50V	AB.DEFGHIJK.....
C	208	87-010-546-080	CAP, ELECT 0.33-50V	AB.DEFGHIJK.....
C	209	87-A11-154-080	CAP,TC U 4700P-16 Z F	AB.DEFGHIJK.....
C	213	87-010-260-080	CAP, ELECT 47-25V	AB.DEFGHIJK.....
C	214	87-010-260-080	CAP, ELECT 47-25V	AB.DEFGHIJK.....
C	212	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
C	211	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
C	219	87-010-544-080	CAP, ELECT 0.1-50V	AB.DEFGHIJK.....
C	217	87-A10-304-080	CAP,M 0.056-50 J	...DEFGHIJK.....
C	218	87-A10-304-080	CAP,M 0.056-50 J	...DEFGHIJK.....
C	218	87-A11-008-080	CAP,M 0.056-50 J DE	AB.....
C	217	87-A11-008-080	CAP,M 0.056-50 J DE	AB.....
C	210	87-A11-154-080	CAP,TC U 4700P-16 Z F	AB.DEFGHIJK.....
C	220	87-010-544-080	CAP, ELECT 0.1-50V	AB.DEFGHIJK.....
C	229	87-018-123-080	CAP, CER 220P-50V	AB.DEFGH.JK.....
C	229	87-018-124-080	CAP, CER 270P-50V	.....I.....
C	221	87-018-211-080	CAP, CER 0.01-50	....EFG.I.....
C	222	87-018-211-080	CAP, CER 0.01-50	....EFG.I.....
C	230	87-018-123-080	CAP, CER 220P-50V	AB.DEFGH.JK.....
C	230	87-018-124-080	CAP, CER 270P-50V	.....I.....
C	236	87-A11-148-080	CAP,TC U 0.1-50 Z F	AB.....IJK.....
C	235	87-A11-148-080	CAP,TC U 0.1-50 Z F	AB.....IJK.....
C	255	87-018-115-080	CAP, CER 47P-50V	....EFG.I.....
C	256	87-018-115-080	CAP, CER 47P-50V	....EFG.I.....
C	257	87-018-119-080	CAP, CER 100P-50V	....EFG.I.....
C	253	87-018-131-080	CAP, CER 1000P-50V	....EFG.I.....
C	254	87-018-131-080	CAP, CER 1000P-50V	....EFG.I.....
D	219	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	218	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	218	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	219	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	220	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	222	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 4/8

D	221	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	221	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	222	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	220	87-A40-291-080	DIODE,1N4148 (CPT)	.....
J	202	87-A60-238-010	TERMINAL,SP 4P (MSC)	AB.DEFGHIJK.....
J	203	87-A60-425-010	JACK,PIN 2P YKC21-3838	.B.....
J	201	87-A60-602-010	JACK,DIA6.3 BLK ST W/SW TC	AB.DEFGHIJK.....
L	202	87-003-383-010	COIL,1UH-S	AB.DEFGHIJK.....
L	201	87-003-383-010	COIL,1UH-S	AB.DEFGHIJK.....
Q	202	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	203	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	204	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	201	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	218	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	216	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	215	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
Q	213	87-A30-108-010	TR,2SB1626	.....I.....
Q	214	87-A30-108-010	TR,2SB1626	.....I.....
Q	212	87-A30-109-010	TR,2SD 2495	.....I.....
Q	211	87-A30-109-010	TR,2SD 2495	.....I.....
Q	216	87-A30-190-080	TR,CC5551	AB.....IJK.....
Q	215	87-A30-190-080	TR,CC5551	AB.....IJK.....
Q	213	87-A30-214-010	TR,2SB1344	.....
Q	214	87-A30-214-010	TR,2SB1344	.....
Q	212	87-A30-215-010	TR,2SD2025	.....
Q	211	87-A30-215-010	TR,2SD2025	.....
Q	214	87-A30-255-010	TR,2SB1342	A..DEFGH.JK.....
Q	213	87-A30-255-010	TR,2SB1342	A..DEFGH.JK.....
Q	211	87-A30-256-010	TR,2SD1933	A..DEFGH.JK.....
Q	212	87-A30-256-010	TR,2SD1933	A..DEFGH.JK.....
Q	231	87-A30-137-010	TR,2SD2494	.B.....
Q	232	87-A30-137-010	TR,2SD2494	.B.....
Q	234	87-A30-138-010	TR,2SB1625	.B.....
Q	233	87-A30-138-010	TR,2SB1625	.B.....
R	224	87-A00-258-080	RES,M/F 0.22-1W J	AB.DEFGHIJK.....
R	223	87-A00-258-080	RES,M/F 0.22-1W J	AB.DEFGHIJK.....
R	254	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
R	253	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	207	87-010-546-080	CAP, ELECT 0.33-50V	..C.....
C	208	87-010-546-080	CAP, ELECT 0.33-50V	..C.....
C	209	87-A11-154-080	CAP,TC U 4700P-16 Z F	..C.....
C	211	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
C	212	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
C	219	87-010-544-080	CAP, ELECT 0.1-50V	..C.....
C	213	87-A10-899-080	CAP,E 47-25 M BP SME	..C.....
C	214	87-A10-899-080	CAP,E 47-25 M BP SME	..C.....
C	210	87-A11-154-080	CAP,TC U 4700P-16 Z F	..C.....
C	220	87-010-544-080	CAP, ELECT 0.1-50V	..C.....
C	230	87-018-123-080	CAP, CER 220P-50V	..C.....
C	235	87-A11-148-080	CAP,TC U 0.1-50 Z F	..C.....
C	236	87-A11-148-080	CAP,TC U 0.1-50 Z F	..C.....
C	240	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
D	205	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	206	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	205	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	206	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	217	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	219	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	216	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	218	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	216	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	217	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	218	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	219	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	222	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	220	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	221	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	221	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	220	87-A40-291-080	DIODE,1N4148 (CPT)	.....
D	222	87-A40-291-080	DIODE,1N4148 (CPT)	.....
J	202	87-033-240-010	TERMINAL,SP 4P32SV1-05	..C.....
J	201	87-A60-602-010	JACK,DIA6.3 BLK ST W/SW TC	..C.....
L	201	87-003-383-010	COIL,1UH-S	..C.....
L	202	87-003-383-010	COIL,1UH-S	..C.....
Q	209	87-A30-190-080	TR,CC5551	..C.....
Q	201	87-A30-197-080	TR,KTA1267GR	..C.....
Q	202	87-A30-197-080	TR,KTA1267GR	..C.....
Q	203	87-A30-197-080	TR,KTA1267GR	..C.....
Q	204	87-A30-197-080	TR,KTA1267GR	..C.....
Q	205	87-A30-198-080	TR,KTC3199GR	..C.....
Q	206	87-A30-198-080	TR,KTC3199GR	..C.....
Q	208	87-A30-198-080	TR,KTC3199GR	..C.....
Q	207	87-A30-198-080	TR,KTC3199GR	..C.....
Q	212	87-A30-137-010	TR,2SD2494	.....
Q	211	87-A30-137-010	TR,2SD2494	.....
Q	214	87-A30-138-010	TR,2SB1625	.....
Q	213	87-A30-138-010	TR,2SB1625	.....
Q	210	87-A30-190-080	TR,CC5551	..C.....
Q	216	87-A30-190-080	TR,CC5551	..C.....
Q	215	87-A30-190-080	TR,CC5551	..C.....
Q	218	87-A30-197-080	TR,KTA1267GR	..C.....
Q	214	87-A30-214-010	TR,2SB1344	..C.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 5/8

Q	213	87-A30-214-010	TR,2SB1344	..C.....
Q	211	87-A30-215-010	TR,2SD2025	..C.....
Q	212	87-A30-215-010	TR,2SD2025	..C.....
R	224	87-A00-258-080	RES,M/F 0.22-1W J	..C.....
R	223	87-A00-258-080	RES,M/F 0.22-1W J	..C.....
R	249	87-A00-258-080	RES,M/F 0.22-1W J	..C.....
R	250	87-A00-258-080	RES,M/F 0.22-1W J	..C.....
C	307	87-010-263-080	CAP, ELECT 100-10V	AB.DEFGHIJK.....
C	308	87-010-263-080	CAP, ELECT 100-10V	AB.DEFGHIJK.....
C	309	87-018-115-080	CAP, CER 47P-50V	....EFG.I.....
C	304	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	301	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	303	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	302	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	317	87-010-546-080	CAP, ELECT 0.33-50V	AB.DEFGHIJK.....
C	318	87-010-546-080	CAP, ELECT 0.33-50V	AB.DEFGHIJK.....
C	310	87-018-115-080	CAP, CER 47P-50V	....EFG.I.....
C	311	87-A10-305-080	CAP,M 0.068-50 J	...DEFGHIJK.....
C	312	87-A10-305-080	CAP,M 0.068-50 J	...DEFGHIJK.....
C	311	87-A11-009-080	CAP,M 0.068-50 J DE	AB.....
C	312	87-A11-009-080	CAP,M 0.068-50 J DE	AB.....
C	326	87-018-205-080	CAP, CERA-SOL 0.022	AB.DEFGHIJK.....
C	322	87-A11-148-080	CAP,TC U 0.1-50 Z F	.....I.....
C	361	87-010-374-080	CAP, ELECT 47-10V	AB.DEFGHIJK.....
C	360	87-010-401-080	CAP, ELECT 1-50V	AB.DEFGHIJK.....
C	399	87-018-127-080	CAP, CER 470P-50V	AB.DEFGHIJK.....
C	401	87-010-544-080	CAP, ELECT 0.1-50V	AB.DEFGHIJK.....
C	402	87-010-544-080	CAP, ELECT 0.1-50V	AB.DEFGHIJK.....
C	403	87-018-118-080	CAP,TC-U 82P-50 B	AB.DEFGHIJK.....
C	404	87-018-118-080	CAP,TC-U 82P-50 B	AB.DEFGHIJK.....
C	412	87-010-405-080	CAP, ELECT 10-50V	AB.DEFGHIJK.....
C	411	87-010-405-080	CAP, ELECT 10-50V	AB.DEFGHIJK.....
C	452	87-010-260-080	CAP, ELECT 47-25V	.....I.....
C	452	87-010-382-080	CAP, ELECT 22-25V	AB.DEFGH.JK.....
C	459	87-018-128-080	CAP, CERA-SOL SS 560P	AB.DEFGHIJK.....
C	458	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	457	87-A10-772-080	CAP,M 5600P-50 J	AB.....
C	461	87-018-126-080	CAP,TC-U 390P-50 B	AB.DEFGHIJK.....
C	462	87-018-126-080	CAP,TC-U 390P-50 B	AB.DEFGHIJK.....
CN	301	87-A60-620-010	CONN,3P V 2MM JMT	AB.DEFGHIJK.....
CN	351	87-A60-625-010	CONN,8P V 2MM JMT	AB.DEFGHIJK.....
D	401	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	401	87-A40-291-080	DIODE,1N4148 (CPT)	.....
IC	301	87-017-889-010	IC,NJM4558LD	AB.DEFGHIJK.....
IC	401	87-017-889-010	IC,NJM4558LD	AB.DEFGHIJK.....
L	451	87-007-342-010	COIL,OSC 85K BIAS	AB.DEFGHIJK.....
Q	306	87-026-218-080	TR,DTC144ES (0.2W)	AB.DEFGHIJK.....
Q	309	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	304	87-A30-090-080	FET,2SK2541	AB.DEFGHIJK.....
Q	303	87-A30-090-080	FET,2SK2541	AB.DEFGHIJK.....
Q	302	87-A30-091-080	FET,2SJ460	AB.DEFGHIJK.....
Q	305	87-A30-091-080	FET,2SJ460	AB.DEFGHIJK.....
Q	308	87-A30-091-080	FET,2SJ460	AB.DEFGHIJK.....
Q	301	87-A30-091-080	FET,2SJ460	AB.DEFGHIJK.....
Q	307	87-A30-091-080	FET,2SJ460	AB.DEFGHIJK.....
Q	310	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	444	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	443	87-026-609-080	TR,KTA1266GR	AB.DEFGHIJK.....
Q	455	87-026-610-080	TR,KTC3198GR	AB.DEFGHIJK.....
SFR	452	87-024-355-080	SFR,33K DIA6 H	AB.DEFGHIJK.....
SFR	451	87-024-355-080	SFR,33K DIA6 H	AB.DEFGHIJK.....
C	308	87-010-263-080	CAP, ELECT 100-10V	..C.....
C	307	87-010-263-080	CAP, ELECT 100-10V	..C.....
C	304	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	303	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	302	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	301	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	315	87-010-374-080	CAP, ELECT 47-10V	..C.....
C	318	87-010-546-080	CAP, ELECT 0.33-50V	..C.....
C	317	87-010-546-080	CAP, ELECT 0.33-50V	..C.....
C	311	87-A10-305-080	CAP,M 0.068-50 J	.....
C	312	87-A10-305-080	CAP,M 0.068-50 J	.....
C	361	87-010-374-080	CAP, ELECT 47-10V	..C.....
C	360	87-010-401-080	CAP, ELECT 1-50V	..C.....
C	399	87-018-127-080	CAP, CER 470P-50V	..C.....
C	401	87-010-544-080	CAP, ELECT 0.1-50V	..C.....
C	402	87-010-544-080	CAP, ELECT 0.1-50V	..C.....
C	404	87-018-118-080	CAP,TC-U 82P-50 B	..C.....
C	403	87-018-118-080	CAP,TC-U 82P-50 B	..C.....
C	411	87-010-405-080	CAP, ELECT 10-50V	..C.....
C	412	87-010-405-080	CAP, ELECT 10-50V	..C.....
C	452	87-010-382-080	CAP, ELECT 22-25V	..C.....
C	459	87-018-128-080	CAP, CERA-SOL SS 560P	..C.....
C	458	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	462	87-018-126-080	CAP,TC-U 390P-50 B	..C.....
C	461	87-018-126-080	CAP,TC-U 390P-50 B	..C.....
CON	301	87-099-827-010	CONN,3P S2M-3W	..C.....
CON	351	87-099-832-010	CONN,8P S2M-8W	..C.....
D	401	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	401	87-A40-291-080	DIODE,1N4148 (CPT)	.....
IC	301	87-017-889-010	IC,NJM4558LD	..C.....
IC	401	87-017-889-010	IC,NJM4558LD	..C.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 6/8

L	451	87-007-342-010	COIL,OSC 85K BIAS	..C.....
Q	306	87-026-218-080	TR,DTC144ES (0.2W)	..C.....
Q	304	87-A30-090-080	FET,2SK2541	..C.....
Q	303	87-A30-090-080	FET,2SK2541	..C.....
Q	308	87-A30-091-080	FET,2SJ460	..C.....
Q	307	87-A30-091-080	FET,2SJ460	..C.....
Q	305	87-A30-091-080	FET,2SJ460	..C.....
Q	309	87-A30-197-080	TR,KTA1267GR	..C.....
Q	310	87-A30-197-080	TR,KTA1267GR	..C.....
Q	443	87-A30-197-080	TR,KTA1267GR	..C.....
Q	442	87-A30-197-080	TR,KTA1267GR	..C.....
Q	451	87-026-610-080	TR,KTC3198GR	..C.....
Q	453	87-026-610-080	TR,KTC3198GR	..C.....
Q	454	87-026-610-080	TR,KTC3198GR	..C.....
SFR	451	87-A90-432-080	SFR,30K H NVZ6TLTA	..C.....
SFR	452	87-A90-432-080	SFR,30K H NVZ6TLTA	..C.....
C	602	87-018-195-080	CAP, CER 1200P-16V	AB.DEFGHIJK.....
C	601	87-018-195-080	CAP, CER 1200P-16V	AB.DEFGHIJK.....
C	617	87-010-260-080	CAP, ELECT 47-25V	AB.DEFGHIJK.....
C	616	87-010-260-080	CAP, ELECT 47-25V	AB.DEFGHIJK.....
C	614	87-010-545-080	CAP, ELECT 0.22-50V	AB.DEFGHIJK.....
C	611	87-010-545-080	CAP, ELECT 0.22-50V	AB.DEFGHIJK.....
C	613	87-010-545-080	CAP, ELECT 0.22-50V	AB.DEFGHIJK.....
C	612	87-010-545-080	CAP, ELECT 0.22-50V	AB.DEFGHIJK.....
C	615	87-018-104-080	CAP,TC-U 10P-50 SL	AB.DEFGHIJK.....
CN	602	87-099-194-010	CONN,6P 6216V	AB.DEFGHIJK.....
CN	601	87-099-719-010	CONN,30P TYK-B(X)	AB.....
CN	601	88-NF9-657-010	CONN,30P H BLK TYK-B(X)	...DEFGHIJK.....
D	601	87-A40-466-080	ZENER,MTZJ2.7A	AB.DEFGHIJK.....
D	602	87-A40-466-080	ZENER,MTZJ2.7A	AB.DEFGHIJK.....
FB	601	87-008-372-080	FILTER, EMI BL OIRNI	....EFG.I.....
FB	603	87-008-474-080	F-BEAD,EMI BL02RN1	...DEFGHI.....
IC	601	87-A20-715-010	IC,M62439SP	AB.DEFGHIJK.....
J	601	87-A60-425-010	JACK,PIN 2P YKC21-3838	AB.....
J	601	87-A60-881-010	JACK,PIN 2P MSP 242V05 PBSN	...DEFGHIJK.....
C	601	87-018-195-080	CAP, CER 1200P-16V	..C.....
C	602	87-018-195-080	CAP, CER 1200P-16V	..C.....
C	616	87-010-408-080	CAP, ELECT 47-50V	..C.....
C	617	87-010-408-080	CAP, ELECT 47-50V	..C.....
C	613	87-010-545-080	CAP, ELECT 0.22-50V	..C.....
C	611	87-010-545-080	CAP, ELECT 0.22-50V	..C.....
C	612	87-010-545-080	CAP, ELECT 0.22-50V	..C.....
C	614	87-010-545-080	CAP, ELECT 0.22-50V	..C.....
C	615	87-018-104-080	CAP,TC-U 10P-50 SL	..C.....
CON	602	87-099-194-010	CONN,6P 6216V	..C.....
CON	601	87-099-719-010	CONN,30P TYK-B(X)	..C.....
D	601	87-A40-466-080	ZENER,MTZJ2.7A	..C.....
D	602	87-A40-466-080	ZENER,MTZJ2.7A	..C.....
IC	601	87-A20-715-010	IC,M62439SP	..C.....
J	601	87-A60-425-010	JACK,PIN 2P YKC21-3838	..C.....
C	707	87-010-112-080	CAP, ELECT 100-16V	AB.DEFGHIJK.....
C	709	87-010-248-080	CAP, ELECT 220-10V	AB.DEFGHIJK.....
C	701	87-010-404-080	CAP, ELECT 4.7-50V	AB.DEFGHIJK.....
C	705	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	706	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	704	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	708	87-A11-144-080	CAP,TC U 0.1-50 K B	AB.DEFGHIJK.....
C	702	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	703	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	710	87-010-112-080	CAP, ELECT 100-16V	AB.DEFGHIJK.....
C	714	87-010-112-080	CAP, ELECT 100-16V	AB.DEFGHIJK.....
C	715	87-018-119-080	CAP, CER 100P-50V	AB.DEFGHIJK.....
C	712	87-018-149-080	CAP,TC-U 15P-50 CH	AB.DEFGHIJK.....
C	713	87-018-149-080	CAP,TC-U 15P-50 CH	AB.DEFGHIJK.....
D	701	87-017-931-080	ZENER,MTZJ5.6B	AB.DEFGHIJK.....
D	702	87-020-465-080	DIODE,1SS133 (110MA)	....EFG.I.....
IC	701	87-070-127-110	IC,LC72131 D	AB.DEFGHIJK.....
L	701	87-005-847-080	COIL,2.2UH(CECS)	AB.DEFGHIJK.....
Q	701	87-A30-196-080	TR,2SC4115SRS	AB.DEFGHIJK.....
X	701	87-A70-061-010	VIB,XTAL 4.500MHZ CSA-309	AB.DEFGHIJK.....
C	707	87-010-112-080	CAP, ELECT 100-16V	..C.....
C	709	87-010-248-080	CAP, ELECT 220-10V	..C.....
C	701	87-010-404-080	CAP, ELECT 4.7-50V	..C.....
C	704	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	706	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	705	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	702	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	703	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	710	87-010-112-080	CAP, ELECT 100-16V	..C.....
C	714	87-010-112-080	CAP, ELECT 100-16V	..C.....
C	715	87-018-119-080	CAP, CER 100P-50V	..C.....
C	713	87-018-149-080	CAP,TC-U 15P-50 CH	..C.....
C	712	87-018-149-080	CAP,TC-U 15P-50 CH	..C.....
D	701	87-A40-234-080	ZENER,MTZJ5.6A	..C.....
IC	701	87-070-127-110	IC,LC72131 D	..C.....
L	701	87-005-847-080	COIL,2.2UH(CECS)	..C.....
Q	701	87-A30-196-080	TR,2SC4115SRS	..C.....
X	701	87-A70-061-010	VIB,XTAL 4.500MHZ CSA-309	..C.....
C	738	87-010-260-080	CAP, ELECT 47-25V	.....
C	732	87-010-404-080	CAP, ELECT 4.7-50V	.....
C	731	87-010-545-080	CAP, ELECT 0.22-50V	.....
C	733	87-010-545-080	CAP, ELECT 0.22-50V	.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 7/8

C	734	87-010-545-080	CAP, ELECT 0.22-50V	.....
C	736	87-018-132-080	CAP, CER 2200P-16V	.....
C	735	87-018-132-080	CAP, CER 2200P-16V	.....
C	737	87-A11-155-080	CAP,TC U 0.01-16 Z F	.....
C	743	87-010-101-080	CAP, ELECT 220-16	.....
C	742	87-010-400-080	CAP, ELECT 0.47-50V	.....
C	741	87-010-404-080	CAP, ELECT 4.7-50V	.....
C	740	87-018-127-080	CAP, CER 470P-50V	.....
C	747	87-A11-144-080	CAP,TC U 0.1-50 K B	.....
C	746	87-A11-155-080	CAP,TC U 0.01-16 Z F	.....
D	731	87-020-465-080	DIODE,1SS133 (110MA)	.....
IC	731	87-A20-716-010	IC,TA2040AP	.....
Q	731	87-026-269-080	TR,DTA114ES	.....
X	731	87-030-394-010	VIB,CER CSA3.6MGF228	.....
C	758	87-010-112-080	CAP, ELECT 100-16V	AB.DEFGHIJK.....
C	753	87-010-408-080	CAP, ELECT 47-50V	AB.DEFGHIJK.....
C	751	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	752	87-018-143-080	CAP,TC-U 4.7P-50 CH	....EFG.I.....
C	755	87-A11-144-080	CAP,TC U 0.1-50 K B	AB.DEFGHIJK.....
C	762	87-010-400-080	CAP, ELECT 0.47-50V	AB.DEFGHIJK.....
C	763	87-010-401-080	CAP, ELECT 1-50V	AB.DEFGHIJK.....
C	764	87-010-401-080	CAP, ELECT 1-50V	AB.DEFGHIJK.....
C	769	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
C	761	87-010-404-080	CAP, ELECT 4.7-50V	AB.DEFGHIJK.....
C	766	87-010-407-080	CAP, ELECT 33-50V	AB.DEFGHIJK.....
C	765	87-018-115-080	CAP, CER 47P-50V	AB.DEFGHIJK.....
C	768	87-A11-147-080	CAP,TC U 0.047-50 Z F	AB.DEFGHIJK.....
C	774	87-010-405-080	CAP, ELECT 10-50V	AB.DEFGHIJK.....
C	771	87-010-406-080	CAP, ELECT 22-50	AB.DEFGHIJK.....
C	773	87-018-195-080	CAP, CER 1200P-16V	......G.....
C	773	87-018-196-080	CAP, CER 1500P-16V	...DEFGHI.....
C	776	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	789	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
C	786	87-010-405-080	CAP, ELECT 10-50V	AB.DEFGHIJK.....
C	785	87-010-405-080	CAP, ELECT 10-50V	AB.DEFGHIJK.....
C	783	87-018-199-080	CAP, CER 3300P	AB.D...H.JK.....
C	784	87-018-199-080	CAP, CER 3300P	AB.D...H.JK.....
C	783	87-018-202-080	CAP.CERAM.6800PF	....EFG.I.....
C	784	87-018-202-080	CAP.CERAM.6800PF	....EFG.I.....
C	788	87-A11-153-080	CAP,TC U 2200P-16 Z F	AB.......JK.....
C	787	87-A11-153-080	CAP,TC U 2200P-16 Z F	AB.......JK.....
C	790	87-010-403-080	CAP, ELECT 3.3-50V	AB.DEFGHIJK.....
D	751	87-020-465-080	DIODE,1SS133 (110MA)	AB.DEFGHIJK.....
D	751	87-A40-291-080	DIODE,1N4148 (CPT)	.....
IC	751	87-A20-913-010	IC,LA1837NL	AB.DEFGHIJK.....
L	771	87-A50-266-010	COIL,FM DET-2N(TOK)	AB.DEFGHIJK.....
L	772	87-A90-052-010	FLTR,CFMT-450A(TOK)	...D...H.....
L	772	87-A90-053-010	FLTR,PCFMT-060(TOK)	.....
L	772	87-A90-733-010	FLTR,PCFAZH-450 (TOK)	AB.....
L	772	87-A91-110-010	FLTR,PCFJZH-450 (TOK)	....EFG.IJK.....
X	751	87-030-354-010	VIB,CF BFU 450C	...D...H.....
C	758	87-010-112-080	CAP, ELECT 100-16V	..C.....
C	753	87-010-408-080	CAP, ELECT 47-50V	..C.....
C	759	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	762	87-010-400-080	CAP, ELECT 0.47-50V	..C.....
C	764	87-010-401-080	CAP, ELECT 1-50V	..C.....
C	763	87-010-401-080	CAP, ELECT 1-50V	..C.....
C	769	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
C	761	87-010-404-080	CAP, ELECT 4.7-50V	..C.....
C	766	87-010-407-080	CAP, ELECT 33-50V	..C.....
C	765	87-018-115-080	CAP, CER 47P-50V	..C.....
C	768	87-A11-147-080	CAP,TC U 0.047-50 Z F	..C.....
C	774	87-010-405-080	CAP, ELECT 10-50V	..C.....
C	771	87-010-406-080	CAP, ELECT 22-50	..C.....
C	773	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	789	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
C	785	87-010-405-080	CAP, ELECT 10-50V	..C.....
C	786	87-010-405-080	CAP, ELECT 10-50V	..C.....
C	783	87-018-199-080	CAP, CER 3300P	..C.....
C	784	87-018-199-080	CAP, CER 3300P	..C.....
C	787	87-A11-153-080	CAP,TC U 2200P-16 Z F	..C.....
C	788	87-A11-153-080	CAP,TC U 2200P-16 Z F	..C.....
C	790	87-010-403-080	CAP, ELECT 3.3-50V	..C.....
D	751	87-020-465-080	DIODE,1SS133 (110MA)	..C.....
D	751	87-A40-291-080	DIODE,1N4148 (CPT)	.....
IC	751	87-A20-913-010	IC,LA1837NL	..C.....
L	771	87-A50-266-010	COIL,FM DET-2N(TOK)	..C.....
L	772	87-A90-733-010	FLTR,PCFAZH-450 (TOK)	..C.....
L	772	87-A91-110-010	FLTR,PCFJZH-450 (TOK)	.....
C	855	87-010-405-080	CAP, ELECT 10-50V	......G.....
C	856	87-010-405-080	CAP, ELECT 10-50V	......G.....
C	859	87-018-109-080	CAP, CER 22P-50V	......G.....
C	858	87-018-109-080	CAP, CER 22P-50V	......G.....
C	852	87-018-123-080	CAP, CER 220P-50V	......G.....
C	851	87-018-123-080	CAP, CER 220P-50V	......G.....
C	853	87-018-127-080	CAP, CER 470P-50V	......G.....
C	854	87-A11-144-080	CAP,TC U 0.1-50 K B	......G.....
C	857	87-A11-155-080	CAP,TC U 0.01-16 Z F	......G.....
C	860	87-A11-155-080	CAP,TC U 0.01-16 Z F	......G.....
IC	851	87-A20-502-010	IC,BU1920	......G.....
L	851	87-005-847-080	COIL,2.2UH(CECS)	......G.....
Q	851	87-026-610-080	TR,KTC3198GR	......G.....

All manuals and user guides at all-guides.com

ELECTRICAL MAIN PARTS LIST - 8/8

X	851	87-A70-091-010	VIB,XTAL 4.332MHZ CSA-309	......G.....
C	807	87-A11-144-080	CAP,TC U 0.1-50 K B	AB.DEFGHIJK.....
C	805	87-A11-144-080	CAP,TC U 0.1-50 K B	AB.DEFGHIJK.....
C	812	87-010-408-080	CAP, ELECT 47-50V	....EFG.I.....
C	813	87-018-131-080	CAP, CER 1000P-50V	AB.DEFGHIJK.....
C	901	87-A11-148-080	CAP,TC U 0.1-50 Z F	AB.DEFGHIJK.....
C	924	87-014-049-080	CAP,PP 470P-100 J	....EFG.I.....
C	922	87-018-099-080	CAP CERA 3.9P-50	....EFG.I.....
C	923	87-018-101-080	CAP,TC-U 5.6P-50 SL	....EFG.I.....
C	923	87-018-102-080	CAP,TC-U 6.8P-50 SL	.....
C	931	87-010-263-080	CAP, ELECT 100-10V	...D...H.....
C	932	87-010-400-080	CAP, ELECT 0.47-50V	...D...H.....
C	939	87-014-073-080	CAP,PP 4700P-100 J	...D...H.....
C	935	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	937	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	936	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	934	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	938	87-A11-155-080	CAP,TC U 0.01-16 Z F	AB.DEFGHIJK.....
C	940	87-014-051-080	CAPACITOR (PP), 560P	...D...H.....
C	944	87-018-104-080	CAP,TC-U 10P-50 SL	AB.....JK.....
C	941	87-018-109-080	CAP, CER 22P-50V	...D...H.....
C	943	87-A11-144-080	CAP,TC U 0.1-50 K B	AB.DEFGHIJK.....
CF	802	82-785-747-010	CF MS2 GHY R	....EFG.I.....
CF	802	87-008-261-010	FILTER, SFE10.7MA5-A	AB.D...H.JK.....
CF	801	87-008-423-010	CERAMIC FILTER, SFE10.7	....EFG.I.....
D	923	87-020-465-080	DIODE,1SS133 (110MA)	...DEFGHI.....
D	922	87-020-465-080	DIODE,1SS133 (110MA)	...DEFGHI.....
D	921	87-020-465-080	DIODE,1SS133 (110MA)	...DEFGHI.....
D	981	87-A40-618-080	VARI-CAP,SVC 348(S/T)	...D...H.....
FFE	801	A8-6ZA-191-130	6ZA-1 FEENM	......G.....
FFE	801	A8-6ZA-192-030	6ZA-1 FEJNM	.....
FFE	801	A8-6ZA-19C-170	6ZA-1 YFEENC	....EF..I.....
FFE	801	A8-6ZA-19D-070	6ZA-1 YFEJNC	.....
FFE	801	A8-8ZA-190-030	8ZA-1 FEUNM	AB.D...H.....
FFE	801	A8-8ZA-191-030	8ZA-1 YFEUNM	.....JK.....
FFE	801	A8-8ZA-193-070	8ZA-1 YFEUNC	.....
J	801	87-A60-202-010	TERMINAL,ANT 4P MSP-154V-02	AB.D...H.JK.....
J	802	87-A60-403-010	TERMINAL,ANT PAL 2P HSP-312V05	....EFG.I.....
J	931	81-754-629-010	CONNECTOR, 2P	...D...H.....
JW	813	87-008-372-080	FILTER, EMI BL OIRNI	.....H.JK.....
L	801	87-005-847-080	COIL,2.2UH(CECS)	AB.DEFGHIJK.....
L	934	87-005-372-080	COIL S 1MHM	...D...H.....
L	933	87-A50-159-010	COIL,10MH K C2B	...D...H.....
L	942	87-A50-019-010	COIL,OSC LW(COI)	....EFG.I.....
L	941	87-A50-020-010	COIL,ANT LW(COI)	....EFG.I.....
L	941	87-A50-022-010	COIL,ANT SW(COI)	...D...H.....
L	942	87-A50-173-010	COIL,OSC SW-N(COI)	...D...H.....
L	983	87-A50-430-010	COIL,ANT MW(3BSW)	...D...H.....
L	982	87-A50-431-010	COIL,OSC MW(3BSW)	...D...H.....
L	981	87-NF4-650-010	COIL,AM PACK 4N(TOK)	AB.....
L	981	87-NF4-651-110	COIL,AM PACK2N(TOM)	.....
L	981	88-NF8-625-010	COIL,AM PACK3N(TOK)	.....
L	981	8Z-NFA-664-010	COIL,AMPACK 4L(TOK)	.....JK.....
L	981	8Z-NFA-665-010	COIL,AMPACK 2L(TOK)	....EFG.I.....
Q	802	87-026-214-080	TR,DTA114YS (0.3W)	AB.DEFGHIJK.....
Q	803	89-305-352-380	TR,2SC535(B/C)	....EFG.I.....
Q	938	87-026-609-080	TR,KTA1266GR	...D...H.....
Q	939	87-026-609-080	TR,KTA1266GR	...D...H.....
Q	932	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	937	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	934	87-026-610-080	TR,KTC3198GR	...D...H.....
Q	935	87-A30-092-080	FET,2SK439E/F	...DEFGHI.....
Q	933	87-A30-164-080	TR,CSC2001K	...DEFGHI.....
Q	940	87-026-269-080	TR,DTA114ES	...DEFGHI.....
TC	941	87-011-220-080	TRIMMER CAP 20P VTC	...D...H.....
TC	943	87-011-221-080	CAP, TRIMMER 30P	...DEFGHI.....
C	808	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	803	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	804	87-A11-155-080	CAP,TC U 0.01-16 Z F	..C.....
C	813	87-018-131-080	CAP, CER 1000P-50V	..C.....
C	944	87-018-147-080	CAP,TC-U 10P-50 CH	..C.....
CF	801	87-008-261-010	FILTER, SFE10.7MA5-A	..C.....
FFE	801	A8-8ZA-190-030	8ZA-1 FEUNM	..C.....
J	801	87-A60-202-010	TERMINAL,ANT 4P MSP-154V-02	..C.....
L	801	87-005-847-080	COIL,2.2UH(CECS)	..C.....
L	981	87-NF4-650-010	COIL,AM PACK 4N(TOK)	..C.....
L	981	8Z-NFA-664-010	COIL,AMPACK 4L(TOK)	.....
Q	801	87-026-214-080	TR,DTA114YS (0.3W)	..C.....
FC	102	87-033-147-010	FUSE CLAMP	A.CD...H.JK.....
FC	101	87-033-147-010	FUSE CLAMP	A.CD...H.JK.....
SW	101	87-A90-165-010	SW,SL 1-2-3 SWS2301	A.CD...H.JK.....
T	102	87-A60-317-010	TERMINAL, 1P MSC	A.CD...H.JK.....
T	101	87-A60-317-010	TERMINAL, 1P MSC	A.CD...H.JK.....
Z		8Z-NF9-605-010	PWB,PT-4M	A.CD...H.JK.....
Z		8Z-NFA-615-010	PWB,PT 4M HK	.....

All manuals and user guides at all-guides.com

MECHANICAL PARTS LIST - 1/2

+ NOTE: The characters in the suffix column indicate the part usage.

3HR		XX		H
33EZ		XX		I
HA		XX		J
29LH		XX		K
REF.NO	PARTS NO.	KANRI NO.	DESCRIPTION	SUFFIX
	82-NE6-067-010		BADGE,AIWA 30N	ABCDEFGHIJK
	8Z-NB8-011-110		PANEL,LEFT V-2	ABCDEFGHIJK
	8Z-NF9-001-010		CABI,FR H	...D...H
	8Z-NF9-002-010		PANEL,TRAY H	ABCDEFGHIJK
	8Z-NF9-003-010		BOX,CASS 1 1WAY	ABCD..GH.JK
	8Z-NF9-004-010		BOX,CASS 2	ABCD..GH.JK
	8Z-NF9-021-010		CABI,REAR USTM	.B
	8Z-NF9-022-010		CABI,REAR LHSTM	A
	8Z-NF9-023-010		CABI,REAR HRJSTM	...D...H
	8Z-NF9-025-010		CABI,REAR EZSTM	
	8Z-NF9-026-010		CABI,REAR VJSTM	
	8Z-NF9-027-010		CABI,REAR STM	
	8Z-NF9-028-010		CABI,REAR LHSTM S333	..C
	8Z-NF9-029-010		CABI,REAR EZSTE S333	I
	8Z-NF9-030-010		CABI,REAR HRJSTM S333	
	8Z-NF9-031-010		CABI,FR U	ABC.....JK
	8Z-NF9-032-010		BOX,CASS 1R	
	8Z-NF9-036-010		CABI,FR EZ	......G
	8Z-NF9-038-010		CABI,FR D	
	8Z-NF9-042-010		PANEL,TOP V-2	ABCDEFGHIJK
	8Z-NF9-043-010		PANEL,RIGHT S V-2	ABCDEFGHIJK
	8Z-NF9-045-010		PANEL,TOP V-2 B	
	8Z-NF9-046-010		PANEL,LEFT V-2 B	
	8Z-NF9-047-010		PANEL,RIGHT S V-2 B	
	8Z-NF9-051-010		CABI,FR EZ B	
	8Z-NF9-052-010		PANEL,TRAY EZ B	
	8Z-NF9-053-010		BOX,CASS 1 1WAY B	
	8Z-NF9-054-010		BOX,CASS 2 B	
	8Z-NF9-065-010		CABI,REAR USTN	
	8Z-NF9-066-010		CABI,REAR LHSTN	
	8Z-NF9-067-010		CABI,REAR USTFD	
	8Z-NF9-068-010		CABI,REAR EZSTE S223	
	8Z-NF9-069-010		CABI,REAR EZSTE	.....F
	8Z-NF9-070-010		CABI,REAR KSTE	....E
	8Z-NF9-071-010		CABI,REAR USTC	
	8Z-NF9-072-010		CABI,REAR LHSTC	
	8Z-NF9-073-010		CABI,REAR LHSTC S333	
	8Z-NF9-074-010		CABI,REAR EZSTM S223	......G
	8Z-NF9-075-010		CABI,REAR LHJSCM S229	.....JK
	8Z-NF9-076-010		CABI,REAR LHSTFD	
	8Z-NF9-077-010		CABI,REAR LHSTFD S333	
	8Z-NF9-078-010		CABI,REAR HRSTM	
	8Z-NF9-079-010		CABI,REAR EZBM S226	
	8Z-NF9-080-010		CABI,REAR LHSTP	
	8Z-NF9-081-010		CABI,REAR LHSTP S333	
	8Z-NF9-083-010		CABI,REAR ST	
	8Z-NF9-084-010		CABI,REAR EZSTM S333	
	8Z-NF9-085-010		CABI,REAR EZSTFD	
	8Z-NF9-086-010		CABI,REAR LHSTL	
	8Z-NF9-087-010		CABI,REAR HRJSCM	
	88-NF9-056-010		KNOB,RTRY MIC	...D...H
	8Z-NF9-009-010		KNOB,RTRY VOL	ABCD..GH.JK
	8Z-NF9-010-010		KNOB,RTRY JOG	ABCD..GH.JK
	8Z-NF9-011-010		KEY,POWER	ABCD..GH.JK
	8Z-NF9-012-010		KEY,FUN	ABCD..GH.JK
	8Z-NF9-013-010		KEY,ASSY OPE 1W	ABCD..GH.JK
	8Z-NF9-016-010		KEY,CD	ABCD..GH.JK
	8Z-NF9-017-010		KEY,GEQ	ABCD..GH.JK
	8Z-NF9-018-010		KEY,RDS	......G
	8Z-NF9-033-010		KEY,ASSY OPE R	
	8Z-NF9-056-010		KNOB,RTRY VOL B	
	8Z-NF9-057-010		KNOB,RTRY JOG B	
	8Z-NF9-058-010		KEY,FUN B	
	8Z-NF9-059-010		KEY,ASSY OPE 1W B	
	8Z-NF9-060-010		KEY,OPE 1W B	
	8Z-NF9-061-010		KEY,CD B	
	81-532-080-010		LABEL, CASS. COMPT	
	86-NFZ-001-010		WINDOW,TOP	ABCDEFGHIJK
	8Z-NF9-005-010		WINDOW,CD	ABCD..GH.JK
	8Z-NF9-006-010		WINDOW,DISP H	A..D...H.J
	8Z-NF9-007-010		WINDOW,CASS 1	ABCD..GH.JK
	8Z-NF9-008-010		WINDOW,CASS 2	ABCD..GH.JK
	8Z-NF9-037-010		WINDOW,DISP EZ	
	8Z-NF9-039-010		WINDOW,DISP U	.B
	8Z-NF9-041-010		WINDOW,DISP D	
	8Z-NF9-048-010		WINDOW,DISP EZ S223	......G
	8Z-NF9-049-010		WINDOW,DISP EZ S226	
	8Z-NF9-055-010		WINDOW,DISP EZ S333	
	8Z-NF9-062-010		WINDOW,DISP H S333	..C
	8Z-NF9-063-010		WINDOW,DISP H S229	.....K
	84-ZG1-245-210		CAP,OPTICAL	ABCDEFGHIJK
	82-NF5-218-010		SPR-T,EJECT 1 (SIN)	ABCDEFGHIJK
	82-NF5-219-010		SPR-T,EJECT 2 (SIN)	ABCDEFGHIJK

All manuals and user guides at all-guides.com

		82-NF5-229-010	PLATE,LOCK	ABCD..GH.JK.....
		86-NF9-224-010	SPR-C,LOCK	ABCD..GH.JK.....
		87-NF4-216-010	HLDR,LOCK 1	ABCD..GH.JK.....
		87-NF4-217-010	HLDR,LOCK 2	ABC.............
		87-NF4-217-110	HLDR,LOCK 2	...D..GH.JK.....
		87-NF4-221-010	HLDR,CABLE	ABCD..GHIJK.....
		87-NF8-220-010	DMPR,150	ABCD..GH.JK.....
		88-NF5-208-010	HLDR,PWB-M N	ABCDEFGHIJK.....
		8Z-NB8-240-010	COVER, PL	ABCDEFGHIJK.....
		8Z-NF9-204-010	PLATE,MIC	...D...H........
		8Z-NF9-205-010	HLDR,PWB MAIN	...DEFGH........
		8Z-NF9-209-010	HLDR,RDS	.....G..........
		87-067-641-010	UTT2+3-8(W/O SLOT)BL	ABCDEFGHIJK.....
		87-067-688-010	BVTT+3-6	ABC.............
		87-067-689-010	TAPPING SCREW, BVTT+3-8	...DEFGHIJK.....
		87-067-703-010	TAPPING SCREW, BVT2+3-10	ABCDEFGHIJK.....
		87-067-758-010	BVT2+3-12 W/O SLOT	.....G..........
		87-067-975-010	S-SCREW,IT+4-8	ABCDEFGHIJK.....
		87-721-096-410	QT2+3-10 GLD	...DEFGHIJK.....
		87-721-097-410	QT2+3-12 GLD	ABCDEFGHIJK.....
		87-723-096-410	QT2+3-10W/O SLOT BL	ABC.............
		87-NF4-224-010	S-SCREW,IT3B+3-8 CU	ABC.....IJK.....
		87-003-317-010	F-BEAD,F0H2515-LG7	....EFG.I.......
		87-050-034-010	AC CORD ASSY,E	....EF..I.......
		87-050-079-010	AC-CORD ASSY,E	A.CD..GH..K.....
		87-050-098-010	AC CODE ASSY,D	....
		87-085-184-010	BUSHING, AC CORD (D)	....
		87-085-185-010	BUSHING, AC CORD (E)	A.CDEFGHIJK.....
		87-085-189-010	BUSHING, CORD (U)	.B..............
		87-099-811-010	PLUG,ADPTR CONV(K)	....E...........
		87-A80-105-010	AC CORD ASSY,AZ	.........J......
		87-A80-110-010	AC CORD ASSY,U SPT-2W	.B..............
		88-906-251-110	FF-CABLE,6P 1.25	ABCDEFGHIJK.....
		88-911-201-110	FF-CABLE,11P 1.25	ABCD..GH.JK.....
		88-913-221-110	FF-CABLE, 13P 1.25 220MM	ABCD..GH.JK.....
C	705	87-010-178-080	CHIP CAP 1000P	...DEFGHI.......
C	814	87-A11-155-080	CAP,TC U 0.01-16 Z F	....
C	902	87-A11-144-080	CAP,TC U 0.1-50 K B	...D...H........
F	101	87-035-139-010	FUSE, 2.5A T 250V	..C.............
F	101	87-035-219-010	FUSE, 500MA'T'	....EFG..........
F	101	87-035-222-010	FUSE, 1AT	...D...HI.......
F	101	87-035-224-010	FUSE, 1.6AT	A........JK.....
F	101	87-035-485-010	FUSE,2A 125V D UL	.B..............
PT	101	88-NF8-605-010	PT,8NF-8LH	..C.............
PT	101	88-NF9-605-010	PT,8NF9-D	....
PT	101	88-NF9-608-010	PT,8NF9-EKZ	....EFG..........
PT	101	88-NF9-610-010	PT,8NF-9 HI-HR	....
PT	101	88-NF9-611-010	PT,8NF-9 HI-LH	A........JK.....
PT	101	8Z-NF9-620-010	PT,ZNF-9 U	.B..............
PT	101	8Z-NF9-622-010	PT,ZNF-9 EZ-HI	........I.......
PT	101	8Z-NF9-623-010	PT,ZNF-9 HR	...D...H........
		82-NF7-210-110	GUIDE,FL (*)	ABCD..GH.JK.....
WH	101	87-A90-459-010	HLDR,WIRE 2.5-5P	AB.DEFGHIJK.....
WH	101	87-A90-460-010	HLDR,WIRE 2.5-7P	..C.............
W	101	83-NE2-618-110	F-CABEL,5P-2.5	AB.DEFGHIJK.....
WH	102	87-A90-459-010	HLDR,WIRE 2.5-5P	AB.DEFGHIJK.....
W	101	85-NF5-628-010	F-CABLE 7P-2.5	..C.............
WH	102	87-A90-460-010	HLDR,WIRE 2.5-7P	..C.............
		87-067-703-010	TAPPING SCREW, BVT2+3-10	AB.DEFGHIJK.....
		87-067-703-010	TAPPING SCREW, BVT2+3-10	..C.............

all-guides.com

All manuals and user guides at all-guides.com

ACCESSORIES / PACKAGE LIST - 1/1

NOTE: The characters in the suffix column indicate the part usage.

```
3HR ....................XX.............................................H.....
33EZ ...................XX.............................................I.....
HA .....................XX.............................................J.....
29LH ...................XX.............................................K.....
```

REF.NO		PARTS NO.	KANRI NO.	DESCRIPTION	SUFFIX
	1	8Z-NF9-901-010		IB,H(ECA)M	...D.....
	1	8Z-NF9-901-110		IB,H(ECA)M	.......H.....
	1	8Z-NF9-902-010		IB,LH(ESP)M	A...........
	1	8Z-NF9-903-010		IB,U(ESF)M	.B..........
	1	8Z-NF9-903-110		IB,U(ESF)M	....
	1	8Z-NF9-905-010		IB,K(E)E	....E.....
	1	8Z-NF9-906-010		IB,EZ(9L)E	.....F.....
	1	8Z-NF9-907-010		IB,V(ER)M	....
	1	8Z-NF9-908-010		IB,D(J)M	....
	1	8Z-NF9-911-010		IB,H(ECA)M -333	....
	1	8Z-NF9-912-010		IB,LH(ESP)M -333	..C........
	1	8Z-NF9-913-010		IB,U(ESF)S	....
	1	8Z-NF9-916-010		IB,EZ(9L)E -223	....
	1	8Z-NF9-918-010		IB,D(J)I	....
	1	8Z-NF9-921-010		IB,H(ECA)D	....
	1	8Z-NF9-922-010		IB,LH(ESP)S	....
	1	8Z-NF9-924-010		IB,LH(ESP)D	....
	1	8Z-NF9-926-010		IB,EZ(9L)E -333	........I.....
	1	8Z-NF9-927-010		IB,EZ(9L)M -333	....
	1	8Z-NF9-928-010		IB,LH(ESP)K	....
	1	8Z-NF9-929-010		IB,LH(ESP)K -333	....
	1	8Z-NF9-930-010		IB,H(ECA)K	....
	1	8Z-NF9-931-010		IB,H(ECA)K -333	....
	1	8Z-NF9-932-010		IB,LH(ESP)S -333	....
	1	8Z-NF9-936-010		IB,EZ(9L)M -223	......G.....
	1	8Z-NF9-937-010		IB,EZ(9L)M	....
	1	8Z-NF9-933-010		IB,LH(P)CCE -229	.........K.....
	1	8Z-NF9-934-010		IB,HA(S)KIT	.........J.....
	1	8Z-NF9-935-010		IB,H(T)KIT	....
	3	87-006-268-010		AM-LOOP ANT NC (UN)	....
	2	87-043-095-010		WIRE ANTENNA	...D...H.....
	2	87-043-106-010		WIRE, FM ANT (Z)	....EFG.I.....
	2	87-043-115-010		ANT,FEEDER FM	ABCD...H.JK.....
	3	87-A90-030-010		ANT,LOOP AM-NC C	........IJK.....
	3	87-A90-054-010		ANT,LOOP AM-CON C	.......H.....
	4	87-A91-017-010		PLUG,CONVERSION JT-0476	A.CD...H.....
	5	8Z-NF8-701-010		RC UNIT,RC-ZAS01	....
	5	8Z-NF8-701-110		RC UNIT,RC-ZAS01	....
	5	8Z-NF8-702-010		RC UNIT,RC-ZAS01	....
	5	8Z-NF9-701-010		RC UNIT,ZAS02	ABC...........
	5	8Z-NF9-701-110		RC UNIT,ZAS02	...D..GH.JK.....
	5	8Z-NF9-702-010		RC UNIT,ZAS02	....EF..I.....
	5	8Z-NF9-703-010		RC UNIT,ZAS17	....
ANT	3	87-006-225-010		AM LOOP ANT NC2	ABC.EFG.....
ANT	3	87-006-269-010		AM LOOP ANT (UN)	...D.....

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 1 (MAIN : LH,HA)

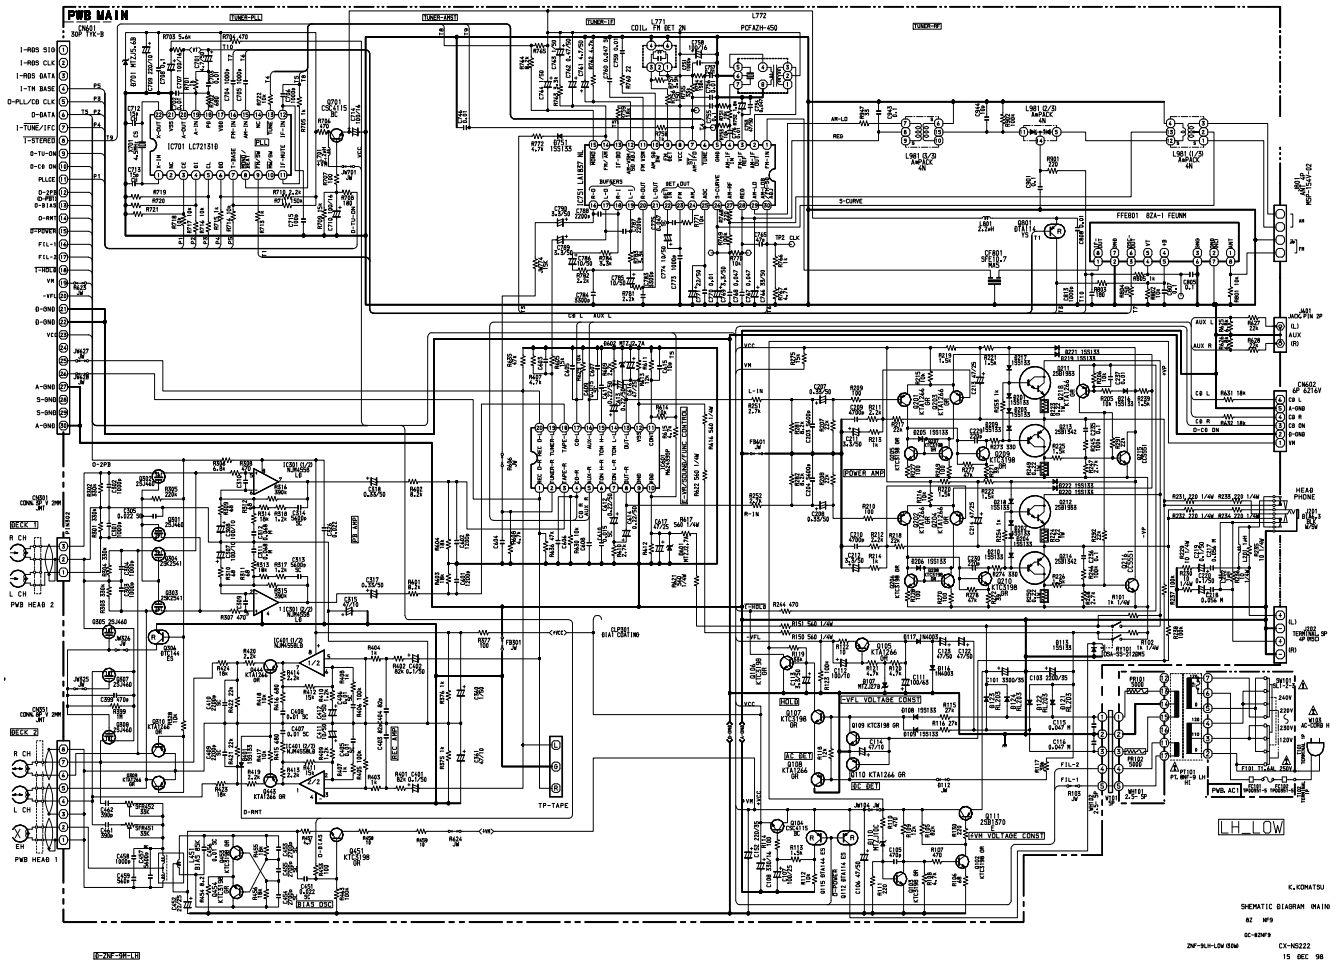

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 2 (MAIN : HR)

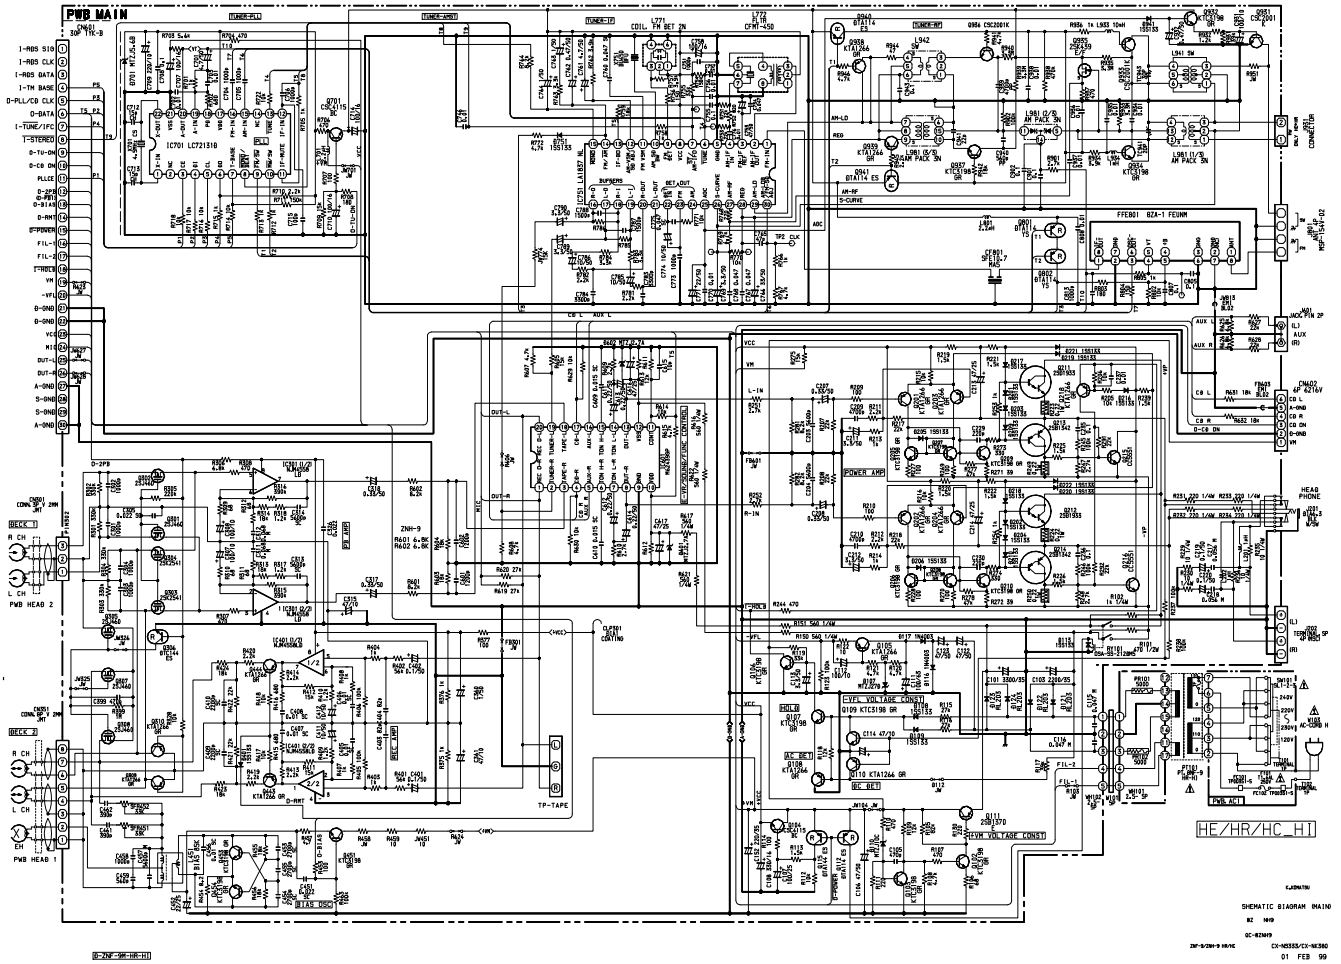

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 3 (MAIN : EZ)

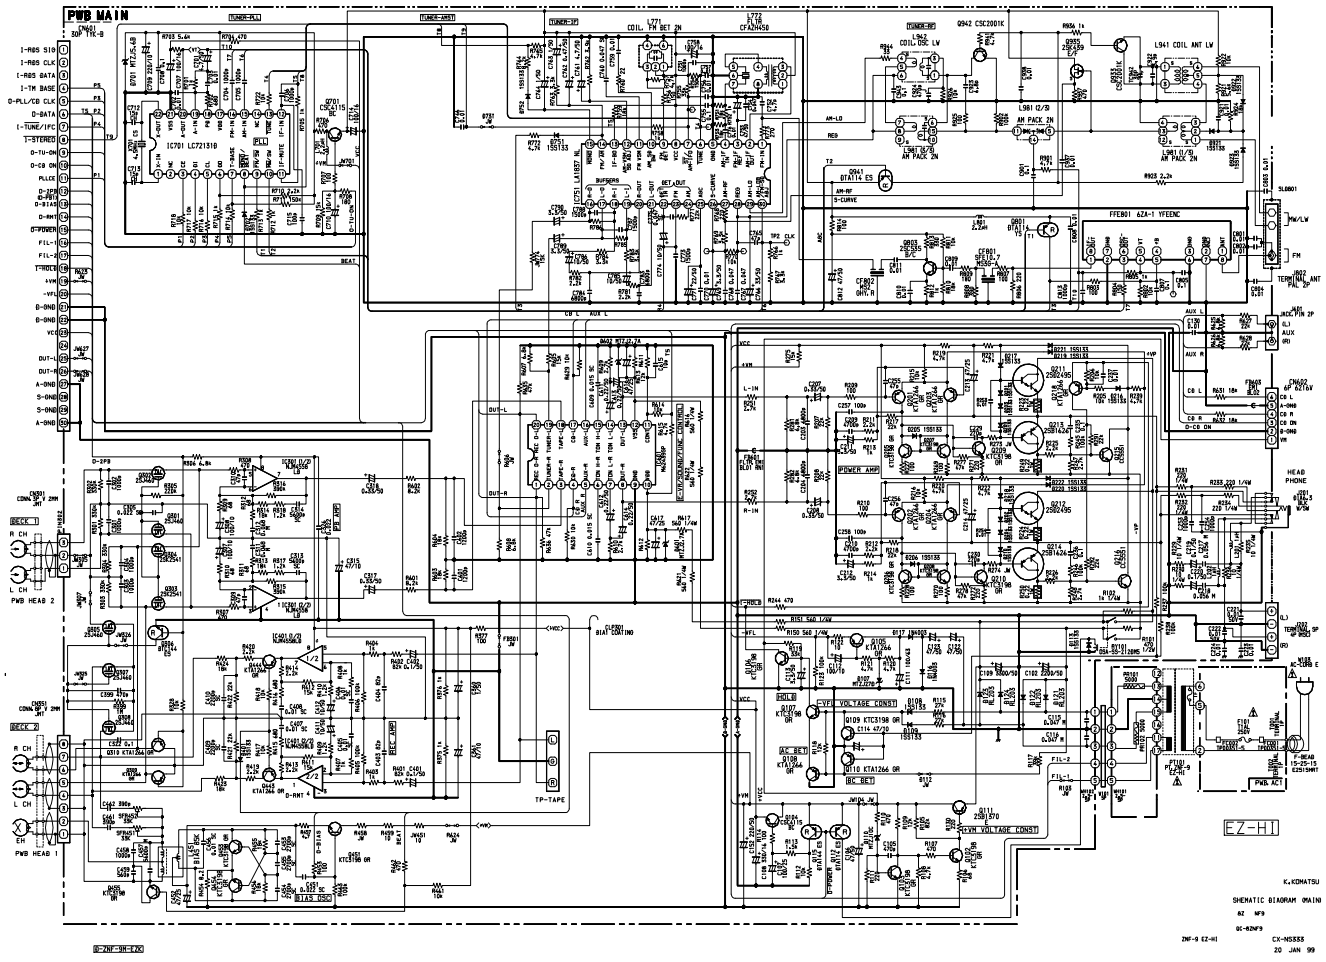

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 4 (FRONT : LH,HA)

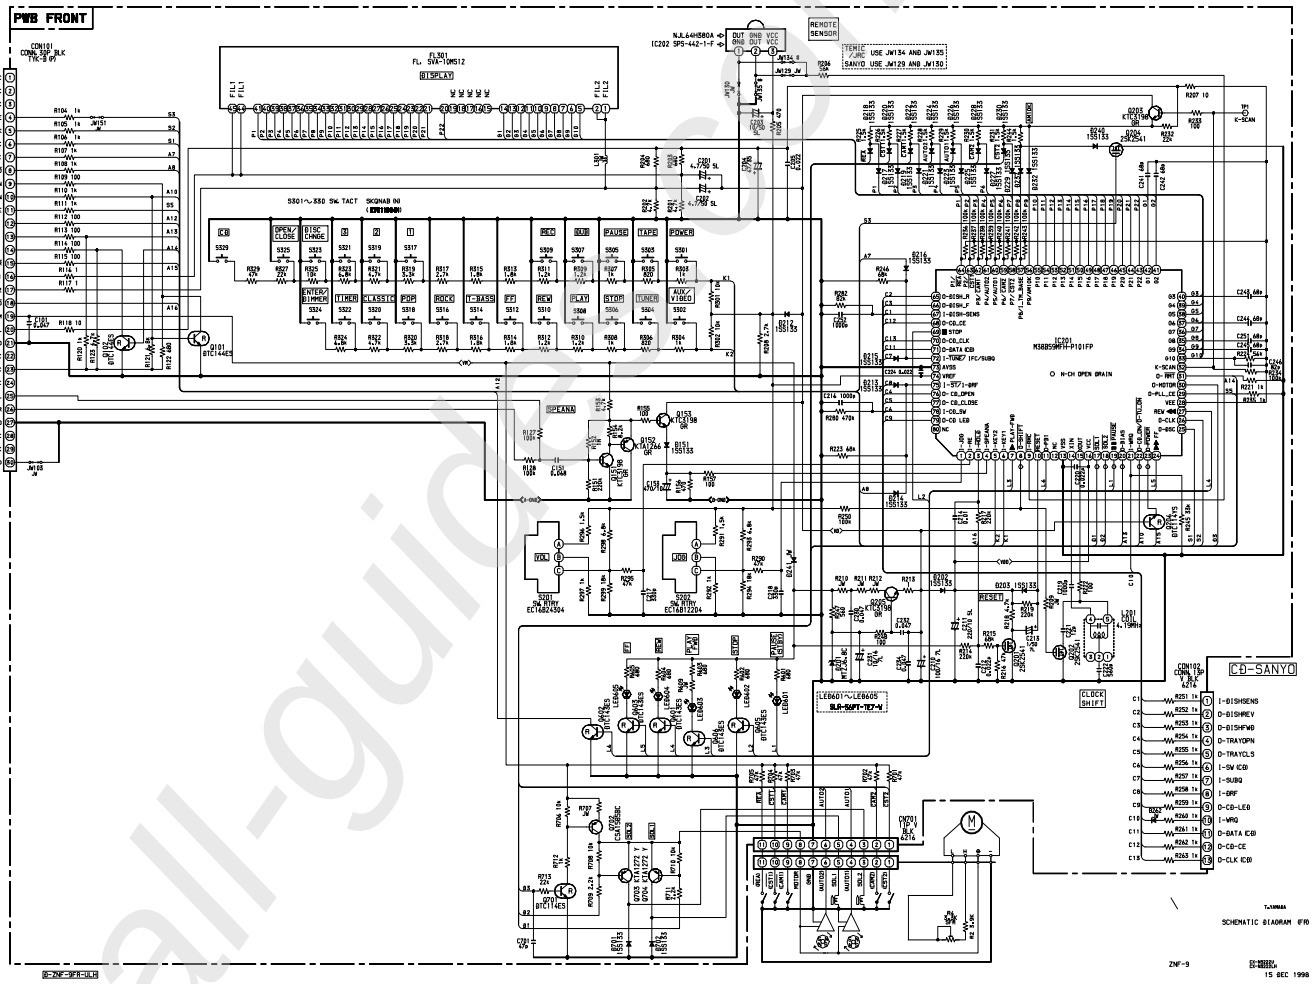

all-guides.com

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 5 (FRONT :HR)

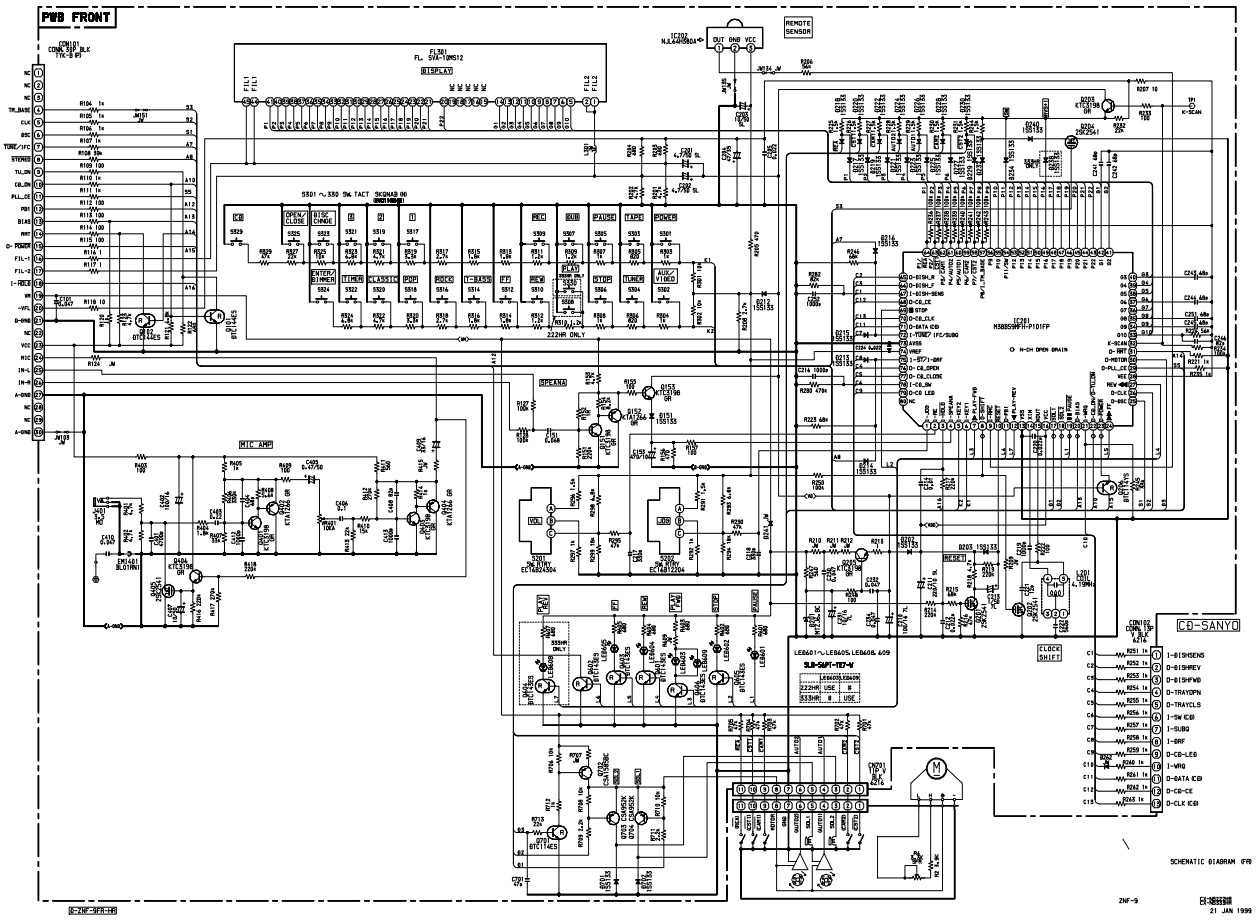

All manuals and user guides at all-guides.com

SCHEMATIC DIAGRAM – 6 (FRONT : EZ)

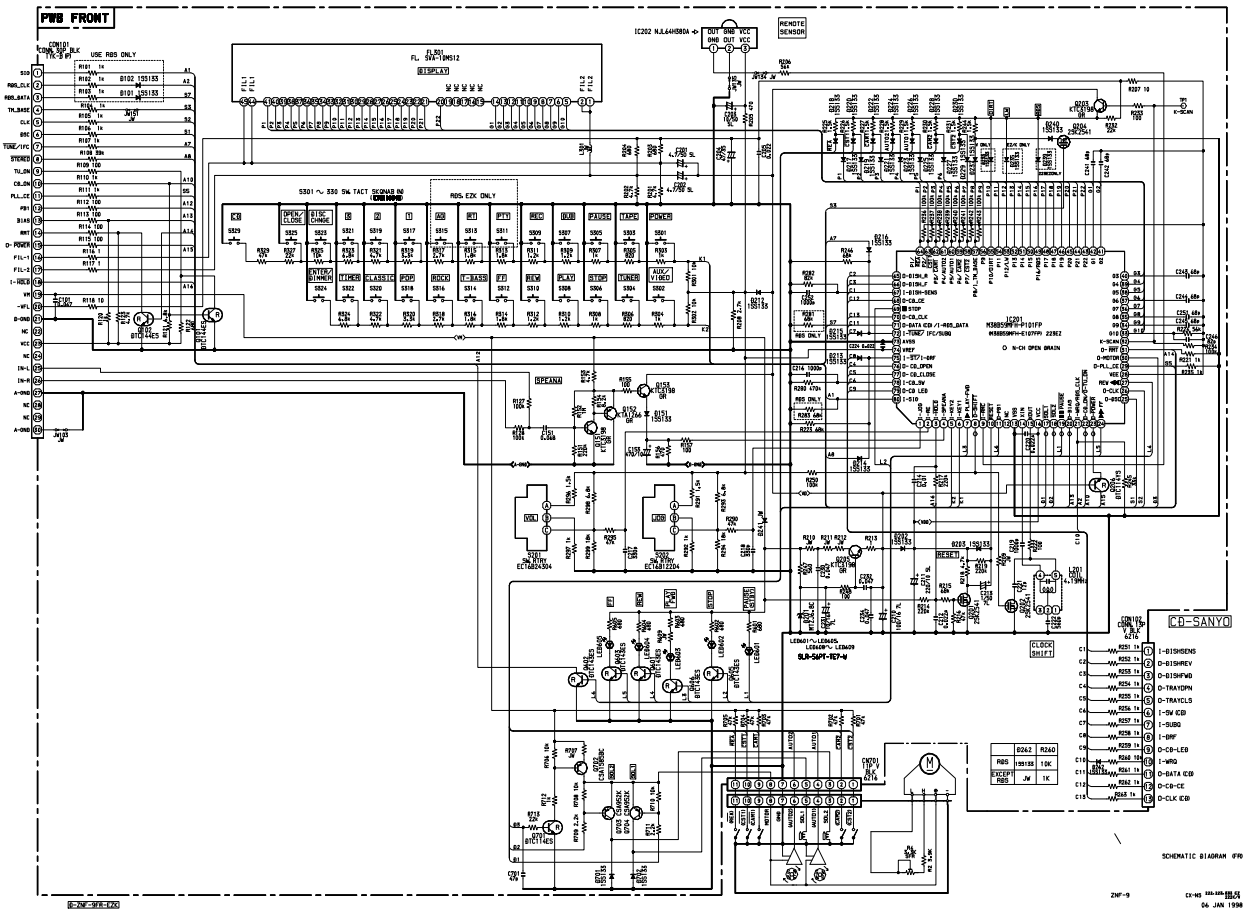

All manuals and user guides at all-guides.com

サービス技術ニュース	
番号	連絡内容
G－　－	
G－　－	
G－　－	

アイワ株式会社
AIWA CO.,LTD.

〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 （代表）

9301896

Tokyo Japan

Printed in Singapore